



REMOTE HANDSET CODING INSTRUCTIONS B&D MPC2 / MPC3 / MPC4



TO CODE YOUR NEW REMOTE USING THE MOTOR PANEL

If you have access to the motor operating your door, you can use these instructions. However, if the door/gate motor is shared with other tenants at a residential/commercial complex, **do not** use these instructions.

To code in the remote:

1. Ensure your new battery is installed correctly in the new remote
2. Open the cover, if any, on your CONTROL PANEL ON THE WALL to access the CODE SET BUTTON (see diagram 1 on reverse side of this page)
3. Press the CODE SET button ONCE, the 'code set' LIGHT should come ON
4. Press the remote control button you would like to operate the door for TWO SECONDS, the 'code set' LIGHT should go OFF
5. The programming sequence is complete
6. Press the remote control button to test operation of the door

To code in the remote to operate 2 or 3 DOORS/GATES:

1. Remove the cover on each door's motor CONTROL PANEL.
2. Repeat the above process using a DIFFERENT button on the remote to operate each door/gate

If you have an old MPC remote with pinned DIP SWITCH codes you need to change the combination to the below so it will still work alongside your new remote:

1. Open the battery cover on your old remote to view the pinned switches
2. If you have an MPC2 remote, set the 9 switches to the combination shown in DIAGRAM 2
3. If you have an MPC3 or MPC4 remote, set the 8 switches to the combination shown in DIAGRAM 3

Thank you for your purchase.

Our Customer Support team are available weekdays 8am-5pm on (07) 5476 9227 if you have any further questions.

DIAGRAM 1 : CONTROL WALL PANEL:
THE CODE SET BUTTON IS SHOWN IN DIAGRAM BELOW


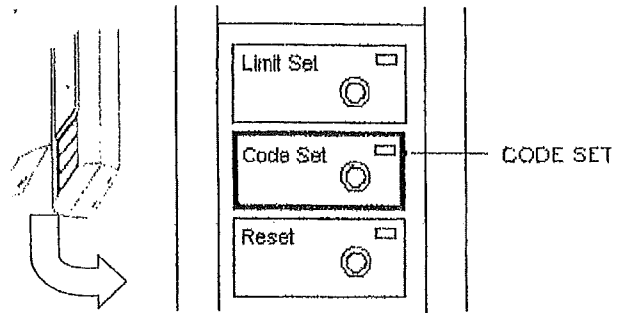


DIAGRAM 2 : DIP SWITCH PATTERN TO OPERATE AN OLD MPC2 REMOTE:


Switch-	1	2	3	4	5	6	7	8	9
+									
0									
-									

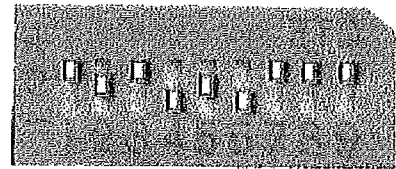

refer to pattern provided with your new remote.

DIAGRAM 3 : DIP SWITCH PATTERN TO OPERATE AN OLD MPC3 OR MPC4 REMOTE:


Open the battery cover of your old remote and you will find an 8 pinned blue code switch next to the battery. Set the switches exactly as below (- 0 - + + - 0 +)

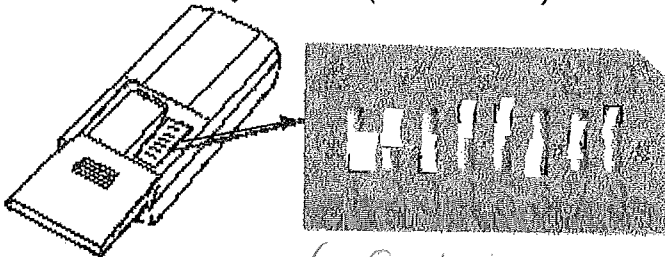

(refer to image provided with your new remote)

Set side switch to the position matching the button you pressed during code set. (Side switch positions match up with each button on your remote)

- = UP
- = MID
- = UP
- = DWN

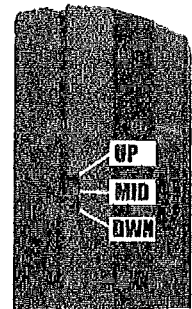

Thank you for your purchase.

Our Customer Support team are available weekdays 8am-5pm on (07) 5476 9227 if you have any further questions.